

**Controllable distance:** Large than 8 meters  
**Battery model:** Battery AAA(UA-M4, R03) × 2  
**Dimension:** L155mm × W45mm × D19mm  
**Weight:** Approx70g(excl.the batteries)

**Technical Parameters**

1. Generally, the battery can be used for one or two years. If it is not used for a long time, remove the battery so as to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together)  
 2. It is not necessary to set brand code again. While the batteries are replaced every time. As usual the LCD only display the time. Once press "Enter" key, you can find the current code showed on LCD. After 5 seconds it turns back to current time.

**Attention**

Press "Room temperature" key, it shows current room temperature and it will disappear after 5 seconds.  
**Room temperature display**

1. If press the TMR ON/OFF key while the time is flashing, timer is deleted.  
 2. After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, the setting is deleted.  
 3. If you want to see the timer, you should press the TMR on/off key, the LCD will display the time and after 5 seconds it will display current time.

**NOTE**

**Timer on: You can set timer on, only after turning off your air conditioner.**  
 1. Press the "TMR on" key, the LCD displays the clock signal and time flashes.  
 2. Press TIME "+ or "-" key, adjust the time when you want to make the air conditioner turn on automatically.  
 3. Time flashes and it will stop after 5 seconds. The LCD displays current time and clock signal. Now setting finishes.


**Timer off: You can set timer off, only after turning on your air conditioner.**  
 1. Press the "TMR off" key, the LCD displays the clock signal and time flashes.  
 2. Press TIME "+ or "-" key, adjust the time when you want to make the air conditioner turn off automatically.  
 3. Time flashes, and it will stop after 5 seconds. The LCD displays current time and clock signal. Now setting finishes.

**Timer on/off setting of Remote control**

1. Put pen tip or other thin item into the "CLOCK" hole and press it. The clock on LCD will flash.  
 2. Press "TIME" "+ or "-" key, tune to current time.  
 3. Press the hole again, the clock on LCD stops flashing, the setting is finished. (The auto-setting is also finished after the clock stop flashing in 5 seconds while you do not press the hole.)


**Clock setting of Remote control**

If you do not know brand of air conditioner or you can not find required model from Model code list, please operate as per the following steps:  
 1. Press "SEL" key, model code on LCD will flash, let the remote control aim at air conditioner, press "SEL" key again and again. Press it once, model code adds automatically and emit corresponding ON/OFF signal. Press and release until air conditioner receives signal and produces buzzer sound. Then press "ENTER" key. After turning on the air conditioner, try other function keys. If they do not work, repeat above steps until it is correct.

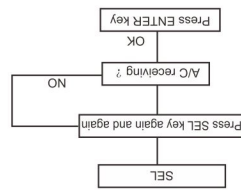

**Remote Control Auto Search**

**NOTE:** If there are many models for one brand, you have to try one by one.

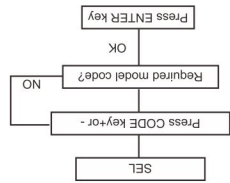

**Brand code Setting of Remote Control**

1. Open the batteries cover. Put 2 AAA (UA-M4, R03) batteries as per polar indicated on battery cabin.  
 2. Find the brand code from Model code list.  
 3. Press "SEL" key, model code on LCD will flash. Press CODE "+ or "-" key until required model code appears. Then, press "ENTER" key, the model code stops flashing. Aim at air conditioner by pressing ON/OFF key, you can remote control your air conditioner.

**Excellent character**

KT-528 integrates 100 brands of more 1028 models in one remote controller. You can input model code directly, or search the model code automatically. Once selected, the code was stored in machine automatically for ever. Timer on and timer off, clock accurate. The perfect design provides you with convenience. So it is your best choice. Please read this user's Guide carefully before using it, which will be a great help to use the remote control for you.

**Product Description**

- 1. LCD background light display
- 2. Room temperature display
- 3. Exact clock display
- 4. Timer on/off function
- 5. Code memory

**Universal Air-conditioner Remote Control**

KT-528 Multi-Function Air-conditioner Remote Control user's Guide



**KT-528**

**Model Code Table**

Brand	Code	Brand	Code
ALPIN	0252, 0253, 0764, 0765	LITTLE DUCK	0015-0020, 0527
AUCMA	0288-0296, 0462, 0801, 0974	LOREN-SEBO	0255, 0471, 0472, 0983
AUX	0297-0300, 0451, 0474, 0475, 0809, 0963	MACQUAY	0234-0237, 0465, 0977
BANSHEN	0264, 0776	MICOM	0415, 0927
BOERKA	0383, 0434, 0436, 0437, 0895	MIDEA	0260-0265, 0526, 0772, 0776
CARRIER	0203-0209, 0482-0486, 0456-0458, 0563-0565	MITSUBISHI	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 1028
CHANGHONG	0301-0308, 0813, 0817, 0819	NORITZ	0431, 0943
CHIGO	0379-0382, 0489, 0515, 0892	Panasonic National	0138-0154, 0483, 0490-0492, 0651, 0995
CHOFU	0184-0187, 0699	PANDA	0378, 0890
CHUNLAN	0345-0350, 0450, 0453, 0962	PHILCO	0210, 0211, 0487, 0488, 1000
CORONA	0155-0163, 0459, 0670	PROTON	0421-0423, 0934
CONROWA	0377, 0889	RAYBO	0362-0367, 0876
CONSUL	0463, 0975	ROWA	0369, 0438, 0439, 0494, 0527, 0531, 0881
DAEWOO	0203-0209, 0406, 0717, 0918	Sabro	0435, 0506-0508, 1018
DAIKIN	0171-0183, 0566, 0577, 0683, 0695	SAIJO DENKI	0212-0215, 0724
DOCTOR	0221, 0449, 0733, 0961	SAMPO	0424-0426, 0938
DONGBAO	0355-0361, 0867, 0870	SAMSUNG	0188-0196, 0516, 0518, 0700, 0707
DONGXINBAO	0413, 0925	SANYO	0046-0095, 0558, 0529, 0530, 0606
Electrolux	0216-0220, 0569, 0729, 0732	SASUKI	0254, 0470, 0982
FEDDERS	0498, 0499, 0528	SHANGLING	0384-0388, 0444 0445, 0956
FRESTECH	0277, 0519, 0520, 0789	SHANXING	0392, 0449, 0961
FUJITSU	0127-0137, 0464, 0552-0554, 0641, 0976	SHARP	0096-0106, 0525, 0608, 0616
FUNAI	0430, 0481, 0942, 0993	SHENGFENG	0376, 0480, 0992
GUQIAO	0244, 0291, 0803	SHINCO	0351-0354, 0454-0456, 0866
GALANZ	0371, 0372, 0521, 0883	SHUANGLU	0376, 0404-0407, 0480, 0992
GLEE	0398, 0399, 0900	SHUAI KANG	0288, 0800
GOLDSTAR	0201, 0466-0469, 0713, 0980	SONGGE	0428, 0429, 0941
GREE	0309-0316, 0482, 0512, 0513	SOVA	0409, 0410, 0921
HAIER	0266-0272, 0453-0455, 0966	SUMMER	0427, 0939
HISENSE	0332-0335, 0517, 0844	SUNDURG	0257, 0505, 1017
HITACHI	0118-0126, 0630, 0637	SWAN	0434, 0477, 0516, 0524, 0946
HUABAO	0336-0344, 0850	TADIRAN	0246-0251, 0758, 0762
HUAKE	0408, 0920	TATUNG	0419, 0420, 0932
HUAMEI	0402, 0460-0465, 0972	TCL	0273-0281, 0476, 0493, 0570, 0786, 0793
HUALING	0317-0325, 0452, 0831	TECO	0256, 0473-0475, 0768, 0987
HUIFENG	0370, 0882	TIANDI, MICOM	0415, 0927
HUIKANG	0368, 0441-0443, 0953	TOSHIBA	0107-0117, 0479, 0561, 0562, 0489, 0629, 1001
HYUNDAI	0202, 0433, 0480, 0714	TRANE	0227-0232, 0739, 0744
JDC	0373, 0440, 0952	UNI-AIR	0222-0224, 0450, 0735, 0962
JIANGNAN	0432, 0944	WEILI	0393-0396, 0908
JINDA	0414, 0926	Whirlpool	0164-0170, 0502, 0681, 1014
JINSONG	0389-0391, 0446-0448, 0959	WINIA	0481, 0550, 0993
JOHSON	0245, 0492, 0757	XILENG	0411 0412, 0923
KANGLI	0374, 0375, 0887	XINLE	0400, 0401, 0913
KELON	0282-0287, 0473, 0485-0488	YANGLI (YAIR)	0403, 0915
KLIMATAIR	0225, 0226, 0452, 0738	YINYAN	0258 0259, 0326-0331, 0478, 0838
KOLIN	0416-0418, 0929	YORK	0107, 0238-0243, 0573, 0751
KONKA	0397, 0457-0459, 0909		
LG	0197-0200, 0514, 1026		
LIANGYU	0233, 0451, 0963		



MADE IN CHINA  
 NO.K-E-00097-V2




**KT-528**

**Universal A/C remote control**

**1028 In 1**

- ▶ LCD back-ground light display
- ▶ Room temperature display
- ▶ Clock display
- ▶ Timer on/off
- ▶ Code memory

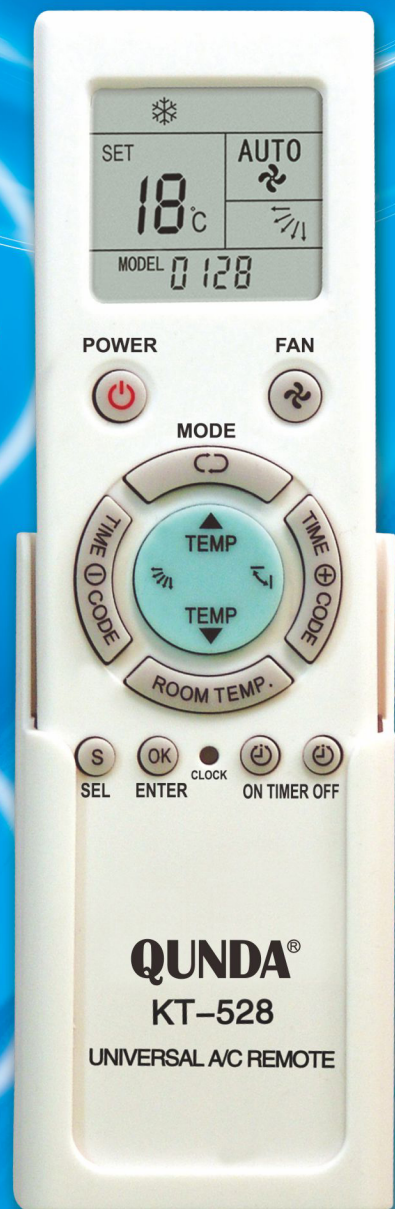

**UNIVERSAL REMOTE**

